

8000 Series Thermostat Remote Control

QUICK START

PAIRING YOUR REMOTE TO YOUR HEATER

- **TURN OFF THE HEATER AT THE POWER POINT**
- **REMOVE THE BATTERIES FROM THE REMOTE**
NOTE: IF YOU ARE REPLACING AN EXISTING REMOTE ENSURE OLD REMOTES BATTERIES ARE ALSO REMOVED.
- **AFTER ONE MINUTE TURN THE POWER BACK ON TO THE HEATER AND PUT THE BATTERIES IN YOUR REMOTE**
- **WITHIN 30 SECONDS OF PUTTING THE BATTERIES IN AND BEFORE PRESSING ANY OTHER BUTTONS. YOU MUST PRESS THE FOLLOWING BUTTONS ON THE REMOTE **P T T ▲****
NOTE: THE 4 BUTTON PRESSES NEED TO BE PRESSED FAIRLY QUICKLY IN SEQUENCE
- **IF YOU HAVE ENTERED THE SEQUENCE CORRECTLY THE LETTERS **LC** WILL APPEAR ON THE SCREEN. AS SOON AS YOU SEE **LC** DISPLAYED PRESS THE POWER BUTTON AND THE HEATER WILL START**
- **IF YOU DO NOT SEE **LC** APPEAR ON THE SCREEN KEEP TRYING THE 4 BUTTON SEQUENCE UNTIL YOU SEE **LC**, THEN HIT THE POWER BUTTON**
NOTE: YOU ONLY HAVE 30 SECONDS FROM TURNING YOUR POWER ON TO THE HEATER TO PAIR YOUR REMOTE, IF IT IS NOT DONE WITHIN THIS TIME THE HEATER WILL LOCK OUT AND YOU WILL HAVE TO START OVER.

OK BUTTON

THE **OK BUTTON** SHOULD ONLY BE PRESSED WHEN ENTERING VALUES IN THE TIME/DATE AND SCHEDULE PROGRAMMING MODE. DO NOT USE THE OK BUTTON WHEN ADJUSTING TEMPERATURES IN MANUAL OR AUTO MODE.

SET TIME & DATE

- **WITH THE REMOTE IN THE OFF POSITION HOLD THE T BUTTON, YOU WILL SEE THE HOUR START TO FLASH, RELEASE THE T BUTTON AND USE THE UP AND DOWN ARROWS TO SET THE HOUR, MINUTES AND DAY. ONCE YOU HAVE CHOSEN WHAT YOU WANT PRESS OK.**

MANUAL MODE

- PRESS THE 'MODE' BUTTON UNTIL 'MANUAL' IS DISPLAYED ON THE REMOTE
- YOU CAN THEN PRESS THE UP AND DOWN ARROWS TO SELECT THE FOLLOWING SETTINGS;
1 = LOW
2 = MEDIUM
3 = HIGH

AUTO MODE

- PRESS THE 'MODE' BUTTON UNTIL 'AUTO' IS DISPLAYED ON THE REMOTE
- YOU CAN THEN PRESS THE UP AND DOWN ARROWS TO SELECT THE DESIRED TEMPERATURE
- AS THE ROOM HEATS UP THE THERMOSTAT WILL RISE 1 DEGREE ABOVE SET TEMPERATURE AND WILL THEN TURN THE FLAME OFF AND COME BACK ON WHEN TEMPERATURE DROPS 1 DEGREE BELOW THE SET TEMPERATURE
EG: IF YOU SET YOUR REMOTE TO 20 DEGRESS, THE TEMPERATURE WILL RISE TO 21 AND TURN OFF, IT WILL THEN COME BACK ON AGAIN WHEN THE ROOM TEMPERATURE DROPS TO 19 DEGRESS.
- THE ROOM TEMPERATURE WILL MEASURED FROM WHEREVER YOUR REMOTE IS PLACED
NOTE: DO NOT LEAVE THE REMOTE DIRECTLY IN FRONT OF THE HEATER, PLACE TOWARDS BACK OF THE ROOM YOU ARE HEATING.

TO WATCH VIDEO -VISIT:

YOU-TUBE – COONARA THERMOSTAT