



## Thermostat Operating Instructions for Coonara Gas Heaters

### Background

The new thermostat is designed to make your life easier. It should be set at a comfortable temperature and placed in a location away from the heater. Preferable it is placed in your living area where you need to control the temperature. Treat this thermostat like you would with your central heating controls - set it and forget about it.

### Programming – only required should the thermostat and receiver loose settings

1. After connecting the new parts, power up the heater.
2. Within 30 seconds, press P.T.T. UP on the thermostat with the thermostat in the power off state (note that the buttons are activated by pressing the sides not the centre of the button)
3. The display should show “LC” – if “LC” does not appear repeat step 2 until it appears
4. If this does not appear after several tries, you may have exceeded the time limit and hence need to switch off the heater and repeat steps 1-3.
5. To confirm that the thermostat has learnt its settings, power on the thermostat and manually adjust the set room temperature such so that the heater will come on.
6. **NOTE:** In Auto Mode you program the thermostat to suit your comfort levels. This thermostat has factory default settings, if you wish to change these, refer to page 10 of the 7000 Series Thermostat User Manual.

All Coonara Gas log Fires have the option of a Factory fitted advanced Thermostat. When fitted with a thermostat Coonara Gas Heater's are supplied without any manual switches to turn the appliance on/off. The thermostat control is required at all times for operation, due to the nature of the thermostat and the visual effect of wood burning. The thermostat will only turn the appliance off if the room reaches 1 degree warmer than the set room temperature when in the Auto Mode.

When in Manual Mode the unit will not turn off, you simply dial the temperature down to suit your comfort levels