



The Warmest Aussie Legend



Coonara Woody

Using the Remote Control

1. Turn the heater on by pressing the round button at the top of the remote control. Please note that this remote must be pointed at the heater for operation (same as with your TV).
2. The automatic airslide (that controls the amount of air supplied to the fire, more air results in more heat) will move to the fully open position and the heater will show a blue light, stating the heater is currently 'cold'. The heater will stay in this mode until the fire is established.
3. When the fire heats up and the heaters firebox gets to its minimum operating temperature (50°C), the lights will turn RED and the room fan will automatically turn on to LOW speed.
4. Once the heater is at operational temperature you can control the fan speed via the remotes Fan + and - Buttons.
5. You can also control the airside to adjust the heat output of the heater from the remote controls Flame + and - buttons. The position of the airslide is indicated by the colour of the lights;
 - Red – Airslide fully open and heater operating at Maximum temperature
 - Orange – Airslide mid-way open and heater operating at Average temperature
 - Yellow – Airslide fully closed and heater operating at Minimum temperature

Please note that there is a total of 7 airslide positions between fully open and fully closed. In these midway positions the light will display a combination of the 2 colours either side of its position.

For example: If you have the airslide fully open and the lights are solid Red, a single press on the - Flame button will close the airslide a small amount and the light will begin to change from full red to a slight orange. You can single press the button to 'step' the damper closed or open, or you can hold it down for quicker transitions.

6. To turn the heater off, press the round button at the top of the remote control. If the heater has burnt out it will simply turn off. If the heater is still at operational temperature it will automatically move the airslide to the fully closed Yellow setting and run the fan on Low. Once the fire has burnt out and the firebox drops below the operational temperature, the Heater will automatically turn itself off.
7. Timer Function: If you wish the run your heater at a particular temperature setting before turning off you can use the Timer function. Locate the 'Off Timer' round button at the bottom of the remote control. A single press on this button will put the heater into a mode that will run the heater for 1 hour at the current settings, after which it will then automatically turn off in the same way as Step 6 above. The amount of presses on the button controls the length of Timers delay. i.e. 2 presses = 2 hours, 3 Presses = 3 hours, etc.

