



The Warmest Aussie Legend



Coonara Woody

Using the Thermostat Control

1. Turn the Thermostat Remote Control on. Note: This remote does not need to be pointed at the heater for operation.
2. The automatic airside (that controls the amount of air supplied to the fire, more air results in more heat) will move to the fully open position and the heater will show a blue light, stating the heater is currently 'cold'. The heater will stay in this mode until the fire is established.

The heater can be operated in 2 modes, Auto or Manual. Pressing the MODE button on the remote control toggles between these 2 modes and is displayed at the bottom of the remotes LCD display.

Auto Mode

3. Once the fire heats up and the heaters firebox gets to its minimum operating temperature (50°C), the lights will turn RED and the room fan will automatically turn on to LOW speed.
4. Once the heater is at operation temperature you can control your rooms temperature (shown at the top of the display) by setting the desired temperature (shown in the middle of the display) on the remote control. To set the desired temperature press the up ▲ and down ▼ arrows accordingly.
5. Once the desired temperature is set, the heater will automatically control the fires temperature and the fan speed to regulate its heat output to reach and then maintain the set temperature.

Basic Function explained: When the room temperature drops below the set temperature the automatic airslide will open and the fan speed will increase, once the set temperature is reached the airslide will then begin to close and the fan speed will reduce. Over time the heater will finely tune itself with very small movements of the airslide and by also adjusting the fans speed to hold the room as closely as possible to the set temperature. If you adjust the set temperature up or down the heater will reconfigure itself and over time settle to the set temperature. If the set temperature cannot be reached, the chosen temperature may be out of the capacity of the heater (for your room size), or the fire is not of adequate size. If the fire has burnt down to the point it can no longer maintain the set temperature, the lights will flash Red indicating for the fire to be reloaded with wood.

Manual Mode

6. Once the heater is at operation temperature you can manually control the heat output via the remotes up and down arrows.
7. By pressing the up ▲ arrow you will see the flame displayed on the centre of the screen increase in size and the fan speed increase.

1 = Low, 2 = Medium and 3 = High.

Pressing the down ▼ button will reduce the Flame size and Fan speed.

8. To turn the heater off, press the on/off button on the remote control. If the heater has burnt out it will simply turn off. If the heater is still at operational temperature it will automatically move the airslide to the fully closed Yellow setting and run the fan on Low. Once the fire has burnt out and the firebox drops below the operational temperature, the Heater will automatically turn itself off.



AUTO MODE



MANUAL MODE